Rotary actuator for butterfly valves

- Torque motor Max. 90 Nm
- Nominal voltage AC 100...240 V
- Control Open/close

Technical data

• Running time motor 35 s



Electrical data	Nominal voltage	AC 100240 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 85265 V
	Power consumption in operation	6 W
	Power consumption in rest position	2 W
	Power consumption for wire sizing	11 VA
	Connection supply / control	Cable 1 m, 3 x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Functional data	Torque motor	Max. 90 Nm (not constant)
	Manual override	with push-button, can be locked
	Running time motor	35 s / 90°
	Sound power level, motor	60 dB(A)
	Position indication	Mechanical, integrated
Safety data	Protection class IEC/EN	II, reinforced insulation
	Protection class UL	II, reinforced insulation
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Low voltage directive	CE according to 2014/35/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14

Ma	chan	ical	data	

Weight	Weight	3.8 kg

Rated impulse voltage supply / control

Type 1

2.5 kV

Max. 95% RH, non-condensing -30...50°C [-22...122°F]

-40...80°C [-40...176°F]

maintenance-free

3

F07

Type of action

Pollution degree

Ambient humidity

Servicing

Ambient temperature

Storage temperature

Connection flange

www.belimo.com



Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning
 systems and must not be used outside the specified field of application, especially in aircraft or
 in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- · Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of rotation may not be adjusted.
- The angle of rotation is not permitted to be subjected to mechanical limitation. It is forbidden to alter the mechanical end stops.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- Because of its non-constant torque, the actuator is neither suitable nor released for
 motorisation with valves from other manufacturers. No legal entitlement can be claimed, even
 after extensive testing. Belimo will not be held liable and will provide no warranty.

Product features

Simple direct mounting

Simple direct mounting on the butterfly valve. The mounting orientation in relation to the butterfly valve can be selected in 90° (angle) increments.

Manual override


Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Torque not constant

Due to the non-linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures.

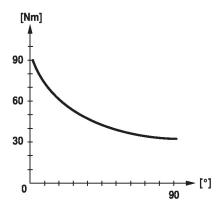

Accessories

LIACTRICAL	2CCDCCOTIDC
LICCUICAL	accessories

Description	Туре	
Auxiliary switch 1 x SPDT add-on	S1A	
Auxiliary switch 2 x SPDT add-on	S2A	
Feedback potentiometer 140 Ω add-on	P140A	
Feedback potentiometer 200 Ω add-on	P200A	
Feedback potentiometer 500 Ω add-on	P500A	
Feedback potentiometer 1 kΩ add-on	P1000A	
Feedback potentiometer 2.8 kΩ add-on	P2800A	
Feedback potentiometer 5 kΩ add-on	P5000A	
Feedback potentiometer 10 kΩ add-on	P10000A	



Electrical installation




Caution: Power supply voltage!

Wire colours:

- 1 = blue
- 2 = brown
- 3 = white


Wiring diagrams


AC 230 V, open/close

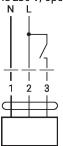

1	2	3	MM
_~	_~	_/_	A - AB = 0%
~	~	~	A - AB = 100%

Dimensions

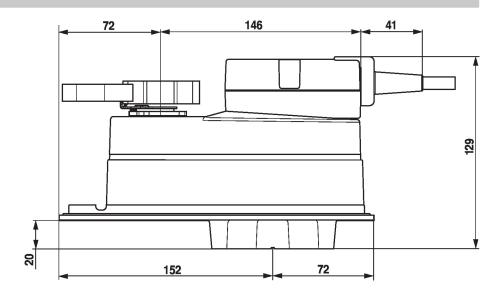

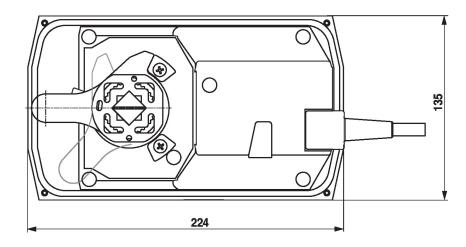



Further documentation

- The complete product range for water applications
- Data sheets for butterfly valves
- Installation instructions for actuators and/or butterfly valves
- General notes for project planning