

Rotary actuator with fail-safe for ball valves

- Torque motor 10 Nm
- Nominal voltage AC 24...240 V / DC 24...125 V
- Control Open/close
- Deenergised closed (NC)
- with 2 integrated auxiliary switches



Technical data

	1	4-	
lectri	ıcaı	ua	ιa

Nominal voltage	AC 24240 V / DC 24125 V	
Nominal voltage frequency	50/60 Hz	
Nominal voltage range	AC 19.2264 V / DC 21.6137.5 V	
Power consumption in operation	6 W	
Power consumption in rest position	2.5 W	
Power consumption for wire sizing	9.5 VA	
Auxiliary switch	2 x SPDT, 1 x 10% / 1 x 11100%	
Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), DC 5 VAC 250 V	
Connection supply / control	Cable 1 m, 2 x 0.75 mm ²	
Connection auxiliary switch	Cable 1 m, 6 x 0.75 mm ²	
Parallel operation	Yes (note the performance data)	

Functional data

Torque motor	10 Nm	
Torque fail-safe	10 Nm	
Direction of motion fail-safe	Deenergised NC, valve closed (A – AB = 0%)	
Manual override	by means of hand crank and locking switch	
Running time motor	75 s / 90°	
Running time fail-safe	<20 s @ -2050°C / <60 s @ -30°C	
Sound power level, motor	45 dB(A)	
Position indication	Mechanical	
Service life	Min. 60'000 fail-safe positions	

Safety data

Protection class IEC/EN	II, reinforced insulation	
Protection class UL	II, reinforced insulation	
Protection class auxiliary switch IEC/EN	II, reinforced insulation	
Degree of protection IEC/EN	IP54	
Degree of protection NEMA/UL	NEMA 2	
Enclosure	UL Enclosure Type 2	
EMC	CE according to 2014/30/EU	
Low voltage directive	CE according to 2014/35/EU	
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
UL Approval	cULus according to UL60730-1A, UL60730-2-14	
	and CAN/CSA E60730-1	
	The UL marking on the actuator depends on	
	the production site, the device is UL-compliant	
	in any case	
Type of action	Type 1.AA.B	
Rated impulse voltage supply / control	4 kV	
Rated impulse voltage auxiliary switch	2.5 kV	
Pollution degree	3	
Ambient humidity	Max. 95% RH, non-condensing	
Ambient temperature	-3050°C [-22122°F]	



Technical data sheet	NRFA-S2
recimined adda orrect	

Safety data Storage tempo

Storage temperature -40...80°C [-40...176°F]

Servicing maintenance-free

Weight 2.2 kg

Weight

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- · Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage
 or at safety extra-low voltage. The combination power supply voltage/safety extra-low voltage
 is not permitted.

Product features

Mode of operation

The actuator is equipped with a universal power supply module that can utilise supply voltages of AC 24...240 V and DC 24...125V.

The actuator moves the valve to the operating position at the same time as tensioning the return spring. The valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted.

Simple direct mounting

Simple direct mounting on the ball valve with only one screw. The mounting orientation in relation to the ball valve can be selected in 90° steps.

Manual override

By using the hand crank the valve can be operated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage.

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Flexible signalling

The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch. They permit a 10% or 11...100% angle of rotation to be signaled.

Electrical installation



Caution: Power supply voltage!

Parallel connection of other actuators possible. Observe the performance data.

Wire colours:

1 = blue

2 = brown

S1 = violet

S2 = red

S3 = white

S4 = orange

S5 = pink


S6 = grey




Wiring diagrams

AC 24...240 V / DC 24...125 V, open/ Auxiliary switch



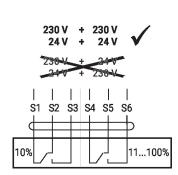

Operating controls and indicators

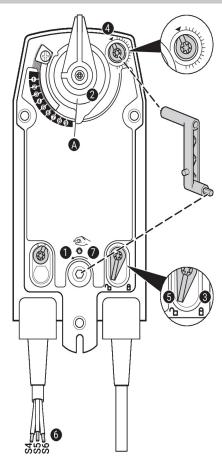

Auxiliary switch settings

1

Note: Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 7 successively.

Manual override

Turn the hand crank until the desired switching position is set.

2 Shaft clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable


Connect continuity tester to S4 + S5 or to S4 + S6.

Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.



Dimensions

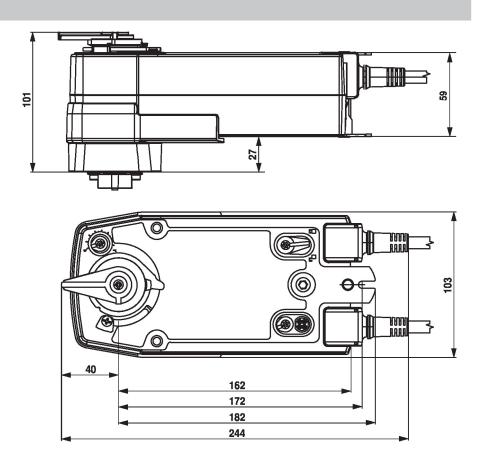

Further documentation

- The complete product range for water applications
- Data sheets for ball valves
- Installation instructions for actuators and/or ball valves
- General notes for project planning