Modulating globe valve actuator for 2-way and 3-way globe valves

- Actuating force 1000 N
- Nominal voltage AC/DC 24 V
- Control modulating 0.5...10 V
- Stroke 20 mm



### **Technical data**

El	ectri	ادعا	de	st:
EI	ecu	La	uc	116

Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	1.5 W
Power consumption in rest position	0.5 W
Power consumption for wire sizing	3 VA
Connection supply / control	Terminals with cable 1 m, 4 x 0.75 mm <sup>2</sup> (Terminal 4 mm <sup>2</sup> )
Parallel operation	Yes (note the performance data)
Actuating force motor	1000 N

### **Functional data**

Actuating force motor	1000 N
Operating range Y	0.510 V
Input impedance	100 kΩ
Position feedback U	0.510 V
Position feedback U note	Max. 0.5 mA
Position accuracy	±5%
Manual override	with push-button, can be locked
Stroke	20 mm
Running time motor	150 s / 20 mm
Adaptation setting range	manual (automatic on first power-up)
Sound power level, motor	45 dB(A)
Position indication	Mechanical, 520 mm stroke

### Safety data

- Osition indication	Wiccharlical, J20 Hill Stroke
Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
Power source UL	Class 2 Supply
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
EMC	CE according to 2014/30/EU
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1
	The UL marking on the actuator depends on
	the production site, the device is UL-compliant
	in any case
Type of action	Type 1
Rated impulse voltage supply / control	0.8 kV
Pollution degree	3
Ambient humidity	Max. 95% RH, non-condensing
Ambient temperature	050°C [32122°F]
Storage temperature	-4080°C [-40176°F]
Servicing	maintenance-free

Weight Weight

#### Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

1.1 kg

- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of motion and so the closing point may be adjusted only by authorised specialists. The direction of motion is critical, particularly in connection with frost protection circuits.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

### **Product features**

Mode of operation The actuator is connected with a standard control signal of 0...10 V and drives to the position

defined by the control signal. The measuring voltage U serves for the electrical display of the

actuator position 0.5...100% and as control signal for other actuators.

Simple direct mounting Simple direct mounting on the globe valve by means of form-fit hollow clamping jaws. The

actuator can be rotated by 360° on the valve neck.

Manual override Manual override with push-button possible (the gear train is disengaged for as long as the

button is pressed or remains locked).

The stroke can be adjusted by using a hexagon socket screw key (4 mm), which is inserted into

the top of the actuator. The stroke shaft extends when the key is rotated clockwise.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

Home position Factory setting: Actuator stem is retracted.

When valve-actuator combinations are shipped, the direction of motion is set in accordance

with the closing point of the valve.

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaptation, which is when the operating range and position feedback adjust

themselves to the mechanical setting range.

The actuator then moves into the position defined by the control signal.

Adaptation and synchronisation An adaptation can be triggered manually by pressing the "Adaptation" button. Both mechanical

end stops are detected during the adaptation (entire setting range).

The actuator then moves into the position defined by the control signal.

Setting direction of motion When actuated, the stroke direction switch changes the running direction in normal operation.

### **Accessories**

Electrical accessories	Description	Туре
	Auxiliary switch 2 x SPDT add-on	S2A-H

Auxiliary switch 2 x SPDT add-on



### **Electrical installation**



Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data. Direction of stroke switch factory setting: Actuator stem retracted ( 🛦 ).

#### Wire colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange

2 3

### Wiring diagrams


AC/DC 24 V, modulating

Override control (frost protection circuit) Ī **◆** 0.5...10 V √ 0.5...10 V

1	2	3 (a)	3 (b)		
	_~	_~	_/_	<u>¥</u>	<b></b>
_~	_~	_/_	_/_	<b></b>	₩
_~	_~	_/_	_~	Υ	Υ

## **Operating controls and indicators**

► 0.5...10 V

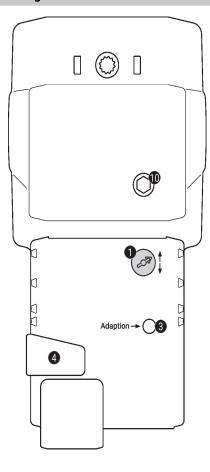

Direction of stroke switch

Switch over: Direction of stroke changes

Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Press button: No function

Manual override button

Press button: Gear train disengages, motor stops, manual override possible


Release button: Gear train engages, standard mode

Manual override

Clockwise: Actuator stem extends Counterclockwise: Actuator stem retracts



# **Dimensions**

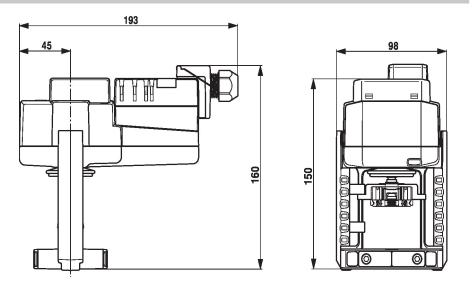

# **Further documentation**

- The complete product range for water applications
- Data sheets for globe valves
- Installation instructions for actuators and/or globe valves
- Notes for project planning 2-way and 3-way globe valves
- General notes for project planning