

Globe valve actuator with fail-safe for 2-way and 3-way globe valves

- Actuating force 1000 N
- Nominal voltage AC 100...240 V
- Control 3-point
- Stroke 20 mm



Technical data

	ectri	ادما	A	-+-
CI	ecui	La	u	dlo

Nominal voltage	AC 100240 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 85265 V
Power consumption in operation	2 W
Power consumption in rest position	1 W
Power consumption for wire sizing	4.5 VA
Connection supply / control	Cable 1 m, 4 x 0.75 mm²
Parallel operation	Yes (note the performance data)

Functional data

Actuating force motor	1000 N	
Setting fail-safe position	Stem retracted / extended, adjustable (POP rotary knob)	
Bridging time (PF)	2 s	
Manual override	with push-button	
Stroke	20 mm	
Running time motor	150 s / 20 mm	
Running time fail-safe	35 s / 20 mm	
Sound power level, motor	56 dB(A)	
Sound power level, fail-safe	60 dB(A)	
Position indication	Mechanical, 520 mm stroke	

Safety data

Protection class IEC/EN	II, reinforced insulation
Power source UL	Class 2 Supply
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
EMC	CE according to 2014/30/EU
Low voltage directive	CE according to 2014/35/EU
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1
	The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
Type of action	Type 1.AA
Rated impulse voltage supply / control	4 kV
Pollution degree	3
Ambient humidity	Max. 95% RH, non-condensing
Ambient temperature	050°C [32122°F]
Storage temperature	-4080°C [-40176°F]
Servicing	maintenance-free



Technical data sheet NVK230A-3

Weight	Weight	1.4 kg
Terms	Abbreviations	POP = Power off position / fail-safe position CPO = Controlled power off / controlled fail- safe PF = Power fail delay time / bridging time
		, , ,

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning
 systems and must not be used outside the specified field of application, especially in aircraft or
 in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of motion and so the closing point may be adjusted only
 by authorised specialists. The direction of motion is critical, particularly in connection with
 frost protection circuits.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features


Mode of operation

The actuator moves the valve to the desired operating position at the same time as the integrated capacitors are loaded. Interrupting the supply voltage causes the valve to be moved to the selected fail-safe position by means of stored electrical energy.

Pre-charging time (start up)

The capacitor actuators require a pre-charging time. This time is used for charging the capacitors up to a usable voltage level. This ensures that, in the event of a power failure, the actuator can move at any time from its current position into the preset fail-safe position. The duration of the pre-charging time depends mainly on how long the power was interrupted.

Typical pre-charging time

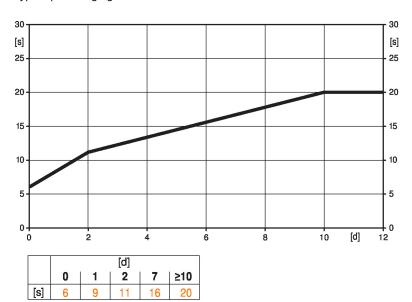

[d] = Power failure in days [s] = Pre-charging time in seconds

Delivery condition (capacitors)

The actuator is completely discharged after delivery from the factory, which is why the actuator requires approximately 20 s pre-charging time before initial commissioning in order to bring the capacitors up to the required voltage level.

Setting fail-safe position (POP)

The rotary knob fail-safe position can be used to adjust the desired fail-safe position. The adjustment range always refers to the maximum height of stroke of the actuator.

In the event of a power failure, the actuator will move to the selected fail-safe position, taking into account the bridging time (PF) of 2 s set at the factory.

Simple direct mounting

Simple direct mounting on the globe valve by means of form-fit hollow clamping jaws. The

actuator can be rotated by 360° on the valve neck.

Manual override

Manual control with push-button possible - temporary. The gear train is disengaged and the actuator decoupled for as long as the button is pressed.

The stroke can be adjusted by using a hexagon socket screw key (4 mm), which is inserted into

the top of the actuator. The stroke shaft extends when the key is rotated clockwise.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

Home position Factory setting: Actuator stem is retracted.

When valve-actuator combinations are shipped, the direction of motion is set in accordance

with the closing point of the valve.

Setting direction of motion

When actuated, the stroke direction switch changes the running direction in normal operation. The stroke direction switch has no influence on the fail-safe position which has been set.

Accessories

Electrical accessories	Description	Туре
	Auxiliary switch 2 x SPDT add-on	S2A-H

Electrical installation



Caution: Power supply voltage!


Parallel connection of other actuators possible. Observe the performance data. Direction of stroke switch factory setting: Actuator stem retracted (\blacktriangle).

Wire colours:

- 1 = blue
- 2 = brown
- 3 = white
- 4 = white

Wiring diagrams






1	2	3	4		®
	7	7	\	±	*
		7	7	±	*
_~	_~	_/_	\	stop	stop
~	_~_	_/_	7		+



Operating controls and indicators

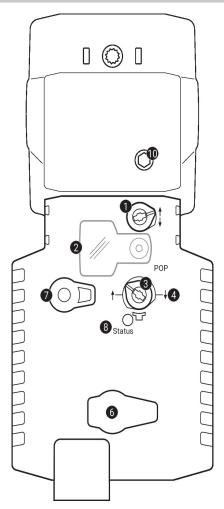

Direction of stroke switch

Switch over: Direction of stroke changes

- 2 Cover, POP button
- 3 POP button
- 4 Scale for manual adjustment
- 6 (no function)
- Manual override button

Press button: Gear train disengages, motor stops, manual override possible

Release button: Gear train engages, standard mode


LED displays

green 8	Meaning / function
On	Operation OK
Flashing	POP function active
Off	- Not in operation - Pre-charging time SuperCap - Fault SuperCap

10 Manual override


Clockwise: Actuator stem extends
Counterclockwise: Actuator stem retracts

Setting emergency setting position (POP)

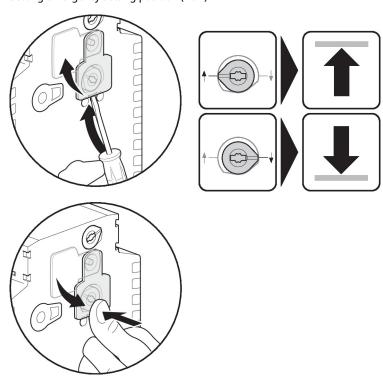



Dimensions

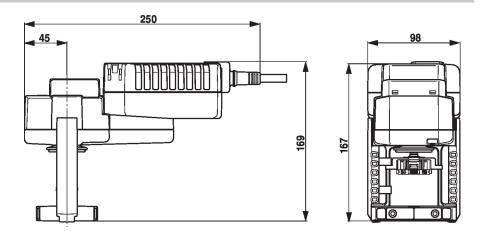

Further documentation

- The complete product range for water applications
- Data sheets for globe valves
- Installation instructions for actuators and/or globe valves
- Notes for project planning 2-way and 3-way globe valves
- General notes for project planning