

HONEYWELL NORTH SHORT BRIM HARD HAT

Why Not Choose Both Quality and Price?

Enhanced performance, all-day comfort, durability – Honeywell North Short Brim Hard Hat combines the heritages of the two world-recognized brands into a new cost-effective, certified head protection solution, with vented and non-vented versions. Stop wondering whether to choose price over quality. Have them both.

SET A NEW STANDARD FOR COMFORTABLE PROTECTION

In workplace environments such as industrial or construction sites, high rotations of personnel are common practice and providing dozens of workers with certified head protection can be expensive. Choosing a less known manufacturer, you might get a product with compromised quality, not certified to the latest standards. That would put your workers' safety at risk and bring about possible customer service issues.

Honeywell has designed the North Short Brim Hard Hat to offer your workers certified quality protection, also respecting your budget. Created by Honeywell, a recognized company known for its support, high performance and service, the North Short Brim Hard Hat provides quality protection, increased comfort and a competitive price.

QUALITY PROTECTION

Made of high-density polyethylene (HDPE), Honeywell North Short Brim Hard Hat is the quality safety solution for all-day wear, protecting against impact and falling or flying objects. If the hard hat isn't well-balanced or moves and slips out of place, it can increase risks and reduce worker productivity. Therefore, Honeywell has designed this hard hat with a four-point ratchet suspension, a dual-locking mechanism and an optional four-point chin strap to customize your fit according to your preferences and prevent the hard hat from getting loose. No matter if you work in extreme heat or cold environments, you'll benefit from the same reliable protection – Honeywell North Hard Hat is resistant to temperatures from -22°F to 122°F (-30°C to +50°C).

INCREASED COMFORT

Benefit from increased comfort with Honeywell North Short Brim Hard Hat's light material – it is created to weigh up to 14.46 oz. (410 g), hence eliminating neck fatigue and increasing work productivity. Moreover, with an ergonomic design and several adjustment features, it provides an excellent fit for multiple head sizes. Increase your comfort and choose the cooling efficiency you desire with the vented hard hat or benefit from protection against electrical hazards with the non-vented version.

COMPETITIVE PRICE

When creating the Honeywell North Short Brim Hard Hat, the two brands have combined their extensive market



Honeywell North Short Brim Hard Hat Non-Vented
SKU: NSB10001E




Honeywell North Short Brim Hard Hat Vented
SKU: NSB11001E

and engineering knowledge and expertise, as well as many years of experience as leading manufacturers of personal protective equipment (PPE). Honeywell North Short Brim Hard Hat is the new generation of fully certified hard hats providing excellent protection, quality, comfort and a long lifespan, everything for an affordable price. Compatible with Honeywell headgear accessories – face shields, welding and hearing protection – and certified to ANSI, CE/EN, CSA and NOM standards, Honeywell North Short Brim Hard Hat delivers the quality protection you need for the price you expect.

Honeywell
NORTH

FEATURES AND BENEFITS

FEATURE	DESCRIPTION
Protection	<ul style="list-style-type: none"> Type I
Electrical class	<ul style="list-style-type: none"> Non-vented version as per EN 50365:2002
Material	<ul style="list-style-type: none"> HDPE - High-density polyethylene
Ergonomic	<ul style="list-style-type: none"> Fits multiple head sizes (52 to 63 cm - head circumference) 4-point Ratchet suspension Dual-locking mechanism prevents the hard hat to get loose in normal conditions Optional four-point chin strap
Weight	<ul style="list-style-type: none"> Up to 390 g without the chin strap Up to 410 g with the chin strap
Ventilation	<ul style="list-style-type: none"> Vented (NSB110) and non-vented (NSB100) options
High temperature resistance	<ul style="list-style-type: none"> +50° C
Low temperature resistance	<ul style="list-style-type: none"> -30° C
Compatibility	<ul style="list-style-type: none"> Compatible with the following Honeywell PPE adapters: <ul style="list-style-type: none"> CP5005 plastic face-shield bracket 3796VS1 helmet adapter for cap mounted earmuffs
Certifications	<ul style="list-style-type: none"> Annex II of the PPE Regulation (EU) 2016/425 Category III (non-vented) + Category II (vented) CE/EN (EN 397:2012 +A1:2012, EN 50365:2002 (non-vented versions) standard
Eight color options	<ul style="list-style-type: none"> White Yellow Orange Green Gray Black Red Dark blue
Industries	<ul style="list-style-type: none"> Construction Manufacturing Mining Oil and gas Ship building Traffic safety Utilities

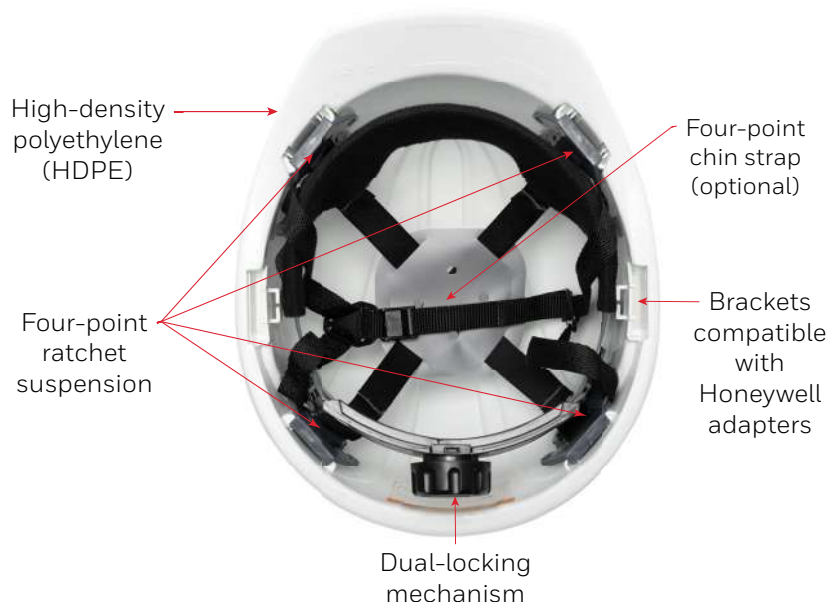

HONEYWELL NORTH SHORT BRIM HARD HAT NON-VENTED



White
NSB10001E



Yellow
NSB10002E



Orange
NSB10003E



Green
NSB10004E



Gray
NSB10009E



Black
NSB10011E



Red
NSB10015E



Dark Blue
NSB10071E



Chin Strap
NSB100CS

HONEYWELL NORTH SHORT BRIM HARD HAT VENTED



White
NSB11001E



Yellow
NSB11002E



Orange
NSB11003E



Green
NSB11004E



Gray
NSB11009E



Black
NSB11011E



Red
NSB11015E



Dark Blue
NSB11071E



Chin Strap
NSB100CS

HONEYWELL NORTH SHORT BRIM HARD HAT ORDERING INFORMATION

SKU	DESCRIPTION	MINIMUM ORDER QUANTITY
NSB10001E	Honeywell North Short Brim Hard Hat - White	20
NSB10002E	Honeywell North Short Brim Hard Hat - Yellow	20
NSB10003E	Honeywell North Short Brim Hard Hat - Orange	20
NSB10004E	Honeywell North Short Brim Hard Hat - Green	20
NSB10009E	Honeywell North Short Brim Hard Hat - Gray	20
NSB10011E	Honeywell North Short Brim Hard Hat - Black	20
NSB10015E	Honeywell North Short Brim Hard Hat - Red	20
NSB10071E	Honeywell North Short Brim Hard Hat - Dark Blue	20
NSB11001E	Honeywell North Short Brim Hard Hat - Vented - White	20
NSB11002E	Honeywell North Short Brim Hard Hat - Vented - Yellow	20
NSB11003E	Honeywell North Short Brim Hard Hat - Vented - Orange	20
NSB11004E	Honeywell North Short Brim Hard Hat - Vented - Green	20
NSB11009E	Honeywell North Short Brim Hard Hat - Vented - Gray	20
NSB11011E	Honeywell North Short Brim Hard Hat - Vented - Black	20
NSB11015E	Honeywell North Short Brim Hard Hat - Vented - Red	20
NSB11071E	Honeywell North Short Brim Hard Hat - Vented - Dark Blue	20
NSB100CS	Honeywell North Short Brim Hard Hat Chin Strap	20

For More Information
www.honeywellsafety.com

**HONEYWELL SAFETY PRODUCTS
UNITED KINGDOM**
Honeywell Safety Products UK LTD
Edison Road
Basingstoke RG21 6QD
Phone: +44 (0) 1256 693 200
Fax: +44 (0) 1256 693 300
Email: info-uk.hsp@honeywell.com

**HONEYWELL SAFETY PRODUCTS
NORDICS**
Honeywell Safety Products Nordic AB
Strandbadsvägen 15
SE-252 29 Helsingborg – Sverige
Phone: +46 (0) 424480433
Email: info-nordic.hsp@honeywell.com

**HONEYWELL SAFETY PRODUCTS
BENELUX**
Honeywell Safety Products Benelux BV
Hermeslaan 1H – 1831 Diegem
Phone: +32 (0) 2 728 2117
Fax: +32 (0) 2 728 2396
Email: info-benelux.hsp@honeywell.com

Honeywell North Short Brim Hard Hat
IEMEA - ENGI 11/2020
© 2020 Honeywell International Inc.

