

- Dual Technology Sensor
- Combined Smoke and Heat Sensor
- Integrated Electronic Sensor
- Integrated EN54-23 Visual Alarm Device
- Loop Powered
- Low Current
- Programmable Volume Control
- Integral Short Circuit Isolator
- Protec Algo-Tec[™] 6000*PLUS* Protocol
- Devices Display Address Number
- FAST[™] Addressing
- Reducing False Alarm
- VAD Classification Adjustable from 3m to 7.5m Room Coverage Volume

6000*PLUS*/OPHT/SVAD Optical Smoke & Heat Sensor Plus Sounder and Visual Alarm Device



The Protec Algo-Tec[™] 6000*PLUS* sensor range has been developed to incorporate advanced fire sensing technology, electronic sounders, high intensity LED visual alarm devices (VAD) and speech enhanced talking sounder capability, all integrated within the sensor head and powered from the loop.

6000*PLUS*/0PHT/SVAD Interactive addressable high performance optical smoke and heat multi-sensor.

The dual technology multi-criteria fire detector uses detection of smoke by scattering of infra-red within the optical chamber coupled with thermal enhancement of the optical sensitivity, as well as providing temperature detection equivalent to grade A2. The smoke and heat channels can be controlled independently for day/night operation with intelligent data being evaluated by the Protec Algo-TecTM 6000*PLUS* interactive programmable algorithms.

These sensors react across the range of fire products from large visible particles from smouldering fires to open flaming fires producing very hot smaller particles and are therefore suitable for use in all smoke detection applications. The environmental conditioning algorithms can be selected to filter unwanted alarms and enhance performance.

Sensor Sounder - The Protec Algo-Tec[™] 6000*PLUS/*OPHT/SVAD sensor is equipped with an integrated loop powered electronic sounder with three programmable sounder tone options, constant, pulse or warble selectable by the control panel along with adjustable volume control. A loop short circuit isolator is also incorporated within the head. The sensor sounder tones are compatible with the full range of Protec 6000 electronic sounders.


Sensor VAD - Compliance with DDA legislation is assisted by the addition of the Protec visual alarm device (VAD) to the 6000*PLUS*ensor, to warn those with hearing impairments or in noisy environments. The VAD utilises a high intensity LED with lower power consumption and increased reliability when compared to alternative indicators.

Continued overleaf.....


Technical Specification



Dimensions (mm)

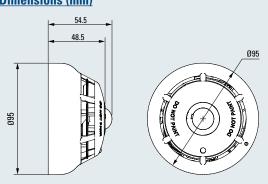

Typical Wiring using 6000PLUS/BASE

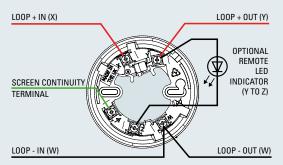

Technical Specification:

Environment	-10°C to +50°C (95% R.H. non condensing)
Ingress Protection	IP21C
Weight (excluding base)	109.52g
Loop Powered	Yes
Loop Voltage	18 - 28V
Loop Standby Load	0.55mA
Peak Alarm Load	24mA
Mounting Height	3m
Coverage	7.5m, 5m or 3m cylindrical diameter
VAD Flash Rate	1Hz to 0.5Hz white flash
Isolator	Yes
Device Protocol	Algo-Tec™ 6000 <i>PLUS</i>
Relevant Standard	EN54 Part 3, 5, 7, 17 & 23

Sensor VAD Continued....

The VAD is located in the centre of the sensor, so can be viewed from all angles. Suitable for ceiling mounting the VAD distributes light in a cylindrical pattern to achieve the required minimum illumination of 0.4lux over the entire coverage area in accordance with EN54-23.

The maximum mounting height is 3m with a coverage diameter of 7.5m.

For smaller areas the device can be programmed on-site for coverage diameter of 3m or 5m at reduced power.

Tone Options

Warble Tone: 990Hz(250ms), 730Hz(250ms) Continuous Tone: 990Hz Pulse Tone: 990Hz(500ms), Silence(500ms)

Tone Volume Options

The tone and volume are selectable at the control panel (measured at one metre): High: 85dB(A), Mid: 75dB(A), Low: 65dB(A)

Design Guidance

Protec VAD's have been approved to BS EN 54-23 and use the rating codes below:

C-x-y (eg C-3-7.5)

Where:

- **C** is ceiling mounted
- x is the maximum height (M)
- y is the illumination diameter for the cylindrical volume (M)

BS EN 54-23 approved VAD's are approved as ceiling mounted and must provide a minimum illumination level of 0.4 lux for the stated volume

Table A: Direct Viewing

Coverage volumes for various ambient light levels (lux)

BS EN54-23 Rating	C-3-7.5
Mounting Position	Ceiling
Less than 100 lux	21dia
100 - 200 lux	18dia
200 - 300 lux	14.3dia
300 - 400 lux	10.5dia
400 - 500 lux	8.3dia
500 - 600 lux	6.8dia
600 - 700 lux	5.3dia
700 - 800 lux	3.8dia


Table B: Indirect Viewing

Coverage volumes for various ambient light levels (lux)

C-3-7.5
Ceiling
9.8dia
9dia
7.5dia
6dia
4.5dia
3.8dia
*
*

Coverage volumes height, diameter, length and width dimensions are in metres.

* Where ambient light levels may, at any time, exceed 600 lux, direct viewing is preferred (CoP 001 clause 4.6.9.4)

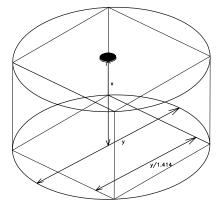

Protec Fire Detection Plc, Protec House, Churchill Way, Nelson, Lancashire, BB9 6RT

© 2014-2019 Protec Fire Detection plc

MED1897 Issue 5