

AstroPure PT300A

AIR PURIFIER



Product Overview

- **H13 True HEPA Filter**
Effectively removes up to 99.95% of ultra fine particles
- **Purification area up to 78 m²**
An economical unit with huge coverage area

More Features

- 3-Stage Air Filtration System that comes with Prefilter, H13 True HEPA filter and Carbon filter
- Adjust fan speed according to your needs
- Set operating hours at your convenience
- Ideal for bundling with a larger unit to fill up the gap for larger area coverage requirement
- Near silence operation for better sleep quality when in night mode
- The filter indicator alerts the user when it is time for filter replacement

Powerful Purifying Performance

AstroPure PT300A is a powerful yet cost-friendly air purifier that is installed with a true composite H13 HEPA filter with a combination of pre and honeycomb activated carbon filter. The prefilter collects dust, dirt, hair, pet dander, and other larger particles from the air. While the honeycomb activated carbon filter is for strong adsorption decomposition of formaldehyde, phenol, smoke and molds in the air.

Sleek Air Filtration

For maximum air filtration efficiency, AstroPure PT300A was designed with space and aesthetics in mind, with options for regular to extremely high air filtration operation depending on the environment. With its 300 CMH, it can cover up to 100 m² to trap or remove these pollutants faster. It's perfect for medium-sized and large rooms.

Plug and Play Clean Air

Conveniently move AstroPure PT300A anywhere and anytime, cleaner air is needed with ease. It's light and portable, so clean air is possible everywhere inside your home.

Plug and Play Clean Air

Simplified control panel with easy-to-identify buttons.



Three Speed Fan for easy fan adjustment, including sleeping mode that lowers the sound level to 31dBA for more restful sleep.



Filter replacement indicator will blink to alert users its time to replace the filter.




Pre-set timers at 1, 4 and 8 hours




On/Off Button

AstroPure PT300A

Powerful Filtration Stages

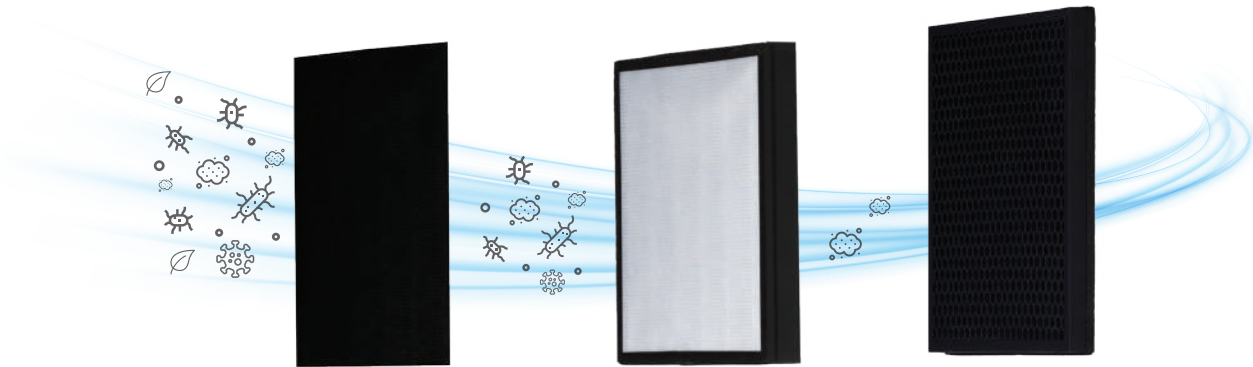

Inside AstroPure PT300A

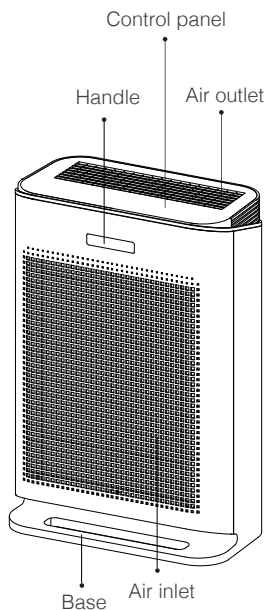

Specification

CADR	145 - 300 CMH
Air Outlet	Top Linear Air Grille
Controller	3 Levels of Speed
Housing Material	PVC
Housing Finishing	Matte White
Filter Configuration	3-in-1 H13 HEPA Composite Filter (Prefilter + H13 HEPA + Carbon)
Power Supply	1ph/50Hz/220~240VAC
Applicable Coverage Area	38 - 78 m ²
Sound Pressure Level	31 - 45 dBA

The coverage area calculation is based on CADR of 300CMH according to NRCC-54013 standard.

**No obstructions within one meter.*

Asia Sales Office

American Air Filter Manufacturing Sdn. Bhd.
(HQ - Malaysia)
(Penang - Malaysia)

AAF Australia Pty. Ltd.
(NSW HQ Sales Office)
(VIC Sales Office)

AAF International (Thailand) Co., Ltd.
AAF Singapore Pte. Ltd.

PT. AAF International Indonesia

Tel : +60 3 5039 7777
Tel : +60 4638 4100

Tel : +61 2 9725 5443
Tel : +61 3 9701 5251
Tel : +66 2348 3870
Tel : +65 6897 0383
Tel : +62 21 8066 7232



Bringing clean air to life®
www.aafasia.com

AAF has a policy of continuous product research and improvement and reserves the right to change design and specifications without notice.

©2022 AAF Malaysia

MAFP-1-0027A 5/22

For enquiries email us at
enquiry@aafasia.com