



Key Features

- Superior thermal imaging quality with the 320 × 240 (76,800 pixels) true thermal imager for faster and more accurate analysis to find faults and anomalies
- Flir-patented MSX® enhancement, which embosses visible details onto thermal images for faster problem identification
- Isotherm instantly detects if temperature of equipment is exceeding a set threshold

Main Applications

- Electrical and mechanical maintenance
- HVAC, building diagnostics and restoration
- Electric vehicle inspections

Specifications

Imaging and optical data	
IR resolution	320 × 240 pixels
Thermal sensitivity/ NETD	<50 mK
Field of view (FOV)	35° × 27°
Minimum focus distance	0.4 m (1.3 ft)
Spatial resolution (IFOV)	2.0 mrad/pixel
F-number	1.4
Image frequency	9 Hz
Focus	Focus free
Digital zoom	Yes, zoom pinch, 1 to 4× continuous
Detector data	
Detector type	Focal plane array, uncooled microbolometer
Spectral range	7.5–13 μm
Detector pitch	12 μm
Image presentation	
Display resolution	640 × 480 pixels
Screen size	3.5 in
Aspect ratio	4:3
Auto orientation	Yes
Touch screen	Yes, capacitive
Display technology	IPS

Image adjustment	Automatic level and span / Manual level and span / 1-Touch level and span
Image modes	Infrared image / Visual image / MSX / Picture-in-picture (IR area on visual image)
Gallery	Yes, incl. thumbnails and custom folder structure
Measurement	
Object temperature range	-20°C to 450°C (-4°F to 842°F)
Accuracy at ambient temperature	• 0°C to 100°C (32°F to 212°F): ±2°C (±5.5°F) • 100°C to 450°C (212°F to 842°F): ±2%
Measurement analysis	
Measurement functions	Spot / Box with max. and min. / Isotherm
Measurements correction	Emissivity; matt/semi-matt/semi-glossy + custom value / Reflected apparent temperature / Atmospheric compensation
Color palettes	Iron, Gray, Rainbow, Arctic, Lava, Rainbow HC
Service functions	
Camera software update	Automatic over Wi-Fi / USB via computer
Storage of images	
Storage media	Internal memory and onboard Flir Ignite™ cloud connectivity with Wi-Fi
Image storage capacity	>5000 sets of images
Image file format	Standard JPEG, 14-bit measurement data included



Flir C8™

Compact Thermal Camera

www.flir.com/products/C8

Specifications, cont.

Image annotations	
Text	Soft keyboard on touchscreen, auto-prompt for note when image is saved
Video streaming	
Non-radiometric video streaming	Yes; MSX, Thermal, Visual, Picture-in-Picture. USB video class colorized uncompressed with overlay 9 Hz
Digital camera	
Resolution	5 MP
Focus	Fixed
Field of view	71.5° × 56° (84° diagonal)
Video lamp	Yes
Data communication interfaces	
Wi-Fi	802.11 a/b/g/n (2.4 and 5 GHz)
USB	USB 2.0, Type-C connector
Bluetooth	Yes
Power system	
Battery type	Rechargeable lithium-ion battery (built-in)
Battery operating time	3 hours
Charging system	USB-C
Charging time	2 hours
Power management	Adjustable stand-by and automatic shut-down
Environmental data	
Operating temperature range	-10°C to 50°C (14°F to 122°F)
Storage temperature range	-40°C to 70°C (-40°F to 158°F)
Humidity (operating and storage)	IEC 60068-2-30/24 h 95% relative humidity 25°C to 40°C (77°F to 104°F) / 2 cycles
Relative humidity	95% relative humidity 25°C to 40°C (77°F to 104° F) non-condensing
EMC	- EN 301 489-1 RED - EN 301 489-17 - FCC 47 CFR Part 15 B, Class B

Encapsulation	Camera housing and lens: IP54 (IEC 60529)
Vibration	2 g (IEC 60068-2-6)
Drop	Designed for 2 m (6.56 ft)
Environmental safety	- REACH Regulation EC 1907/2006 - RoHS2 Directive 2011/65/EC - WEEE Directive 2012/19/EC - Proposition 65
Physical data	
Weight	0.19 kg (0.42 lb)
Size (L × W × H)	138 × 84 × 34 mm (5.4 × 3.3 × 0.94 in)
Tripod mounting	UNC ¼"-20
Housing material	PC and ABS, partially covered with TPE / Aluminum
Packaging, contents	Flir C8, documentation, wrist strap lanyard, USB cable, pouch


Ordering Information

Model	Description
18801-0101	Compact 320 × 240 Thermal Camera with MSX and Flir Ignite Enabled

Accessories

Model	Description
T911940ACC	USB 2.0 A to USB Type-C cable, 1.0 m (black)
T300341	Flir Thermal Studio Standard, 1 year subscription
T8510155	Flir Ignite Pro 100 GB with professional reporting, 1 year subscription
T850118	Flir Ignite 10 GB, 1 year subscription
T850116	Flir Ignite 100 GB, 1 year subscription
T132572ACC	Flir C8 Pouch
PROTECT-C8	Flir Protect 3 Year Extended Warranty for Flir C8

Scan below to learn more about Flir C8

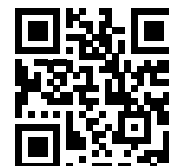

For technical or sales support, please visit:
www.support.flir.com/C8

This product is subject to United States export regulations and may require US authorization prior to export, reexport, or transfer to non-US persons or parties. Diversion contrary to US law is prohibited. For assistance with confirming the Jurisdiction & Classification of Teledyne Flir, LLC products, please contact exportquestions@flir.com. ©2025 Teledyne Flir, LLC. All rights reserved.

Revised 08/29/25
Flir_C8_Datasheet_en-US 25-0310-INS