

TECHNICAL DATA

RSE300 and RSE600 Infrared Cameras



Mounted infrared cameras for research, science and engineering

- **MATLAB®** and **LabVIEW®** software compatibility allows users to integrate infrared data, images and videos to support R&D analysis
- 320 x 240 and 640 x 480 resolution options
- See the details you need with **optional smart lenses**: 2x and 4x telephoto, wide angle and macro lenses
- Optimize images, generate customizable reports and export images to the format of your choice with **SmartView R&D™** software

SmartView R&D Software included with every camera

- Analyze detailed temperature data with advanced thermography software for research and development applications.
- Real time radiometric data streaming from the camera to the PC software.
- Advanced analysis tools for measuring temperature with the ability to place multiple customizable markers and areas of interest.
- Record data trends and time plots on markers and areas of interest.
- Capture radiometric images and recordings manually or off of preset conditions.
- Reports with customizable templates to present findings and analysis.

SUPERIOR IMAGE QUALITY

SPATIAL RESOLUTION

RSE300
1.85 mRad

RSE600
0.93 mRad

RESOLUTION


RSE300
320 x 240

RSE600
640 x 480

FIELD OF VIEW

RSE300
34 °H x 24 °V

RSE600
34 °H x 24 °V

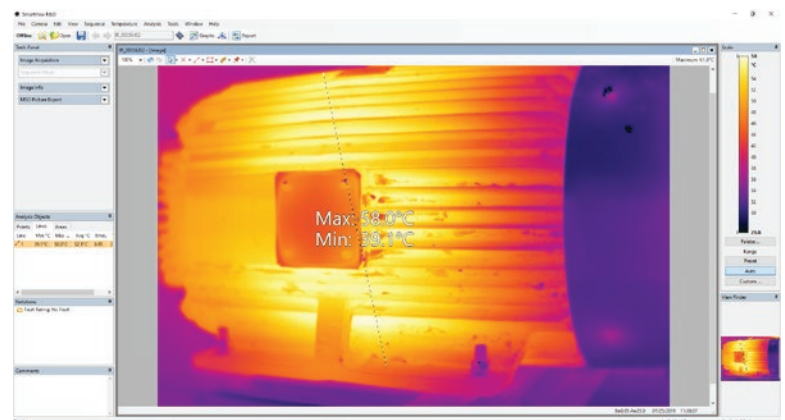

Specifications

Key features	RSE300	RSE600
Infrared resolution	320 x 240 (76,800 pixels)	640 x 480 (307,200 pixels)**
IFOV with standard lens (spatial resolution)	1.85 mRad	0.93 mRad
Field of view	34° H x 24° V	34° H x 24° V
Minimum focus distance	15 cm (approx. 6 in)	
Camera focus options	Focus is adjusted in SmartView R&D™ software	
IR-Fusion® technology	Yes, in SmartView R&D™ software. Five modes of image blending (AutoBlend™ mode, Picture-in-Picture (PIP), IR/Visible alarm, Full IR, Full visible light) add the context of the visible details to your infrared image	
Interfaces for image/data transfer	Supported in camera data ports: GigE Vision	
Thermal sensitivity (NETD)	≤ 0.030 °C at 30 °C target temp (30 mK)*	≤ 0.040 °C at 30 °C target temp (40 mK)*
Level and span	Smooth auto and manual scaling, in SmartView R&D™ software	
Fast auto toggle between manual and auto modes	Yes, in SmartView R&D™ software	
Fast auto-rescale in manual mode	Yes, in SmartView R&D™ software	
Minimum span (in manual mode)	0.1 °C (0.18 °F), in SmartView R&D™ software	
Minimum span (in auto mode)	<1.0 °C (<1.8 °F), in SmartView R&D™ software	
Built-in digital camera (visible light)	5 megapixel industrial performance	
Frame rate	60 Hz or 9 Hz versions	
Digital zoom	Variable up to 16x in SmartView R&D™ software	
Data storage and image capture		
Image capture, review, save mechanism	Capture, save and analyze images in SmartView R&D™ software	
Image file formats	Non-radiometric (.png) or (.jpeg) or fully-radiometric (.gtsi, .cltsq); no analysis software required for non-radiometric (.png, .jpg and .avi) files	
Export file formats	png, jpeg, avi video, ASCII text, CSV, Binary, MATLAB format	
IR PhotoNotes™	Yes	
Text annotation	Yes	
Video recording	Radiometric	
File formats video	Non-radiometric (.AVI) and fully-radiometric (.cltsq)	
Remote display viewing	Yes	
Remote control operation	Yes, through SmartView R&D™ software	
Temperature measurement		
Temperature measurement range (not calibrated below -10 °C)	-10 °C to +1200 °C (14 °F to +2192 °F)	
Accuracy	± 2 °C or ± 2 %, whichever is greater	
Autocapture	Yes	
Reflected background temperature compensation	Yes	
Transmission correction	Yes	
Color palettes		
Standard palettes	11: Rainbow, Iron, Gray, RContrast, Rain900, Rain, Fire, Yellow, GrayRed, MidGray, Y-Glow	
Ultra Contrast™ palettes	3: Histogram equalization, Auto Plateau equalization, Plateau equalization	

*Best possible

**Option to output 320x240 infrared data through GigE Vision

Specifications continued

Key features	RSE300	RSE600
Analysis tools		
Custom markers	Spot, line, box, circle	
Color alarms (temperature alarms)	Yes, high temperature, low temperature, and isotherms (within range)	
Image analysis tools	Ruler, measure line, measure angle, note, pins	
Real-time trend	Point trend, area trend, mix trend, profile trend, boxline trend	
Customizable reports	Display the information you need based on your application	
Center-point temperature measurement	Yes	
Spot temperature	Yes, in SmartView R&D™ software—hot and cold spot markers	
User-definiable spot markers	Unlimited user-definable spot markers	
Center box	Expandable—contractible measurement box with MIN-MAX-AVG temp display	
Additional specifications		
Infrared spectral band	8 μm to 14 μm (long wave)	
Operating temperature	-10 °C to +50 °C (14 °F to 122 °F)	
Storage temperature	-20 °C to +50 °C (-4 °F to 122 °F)	
Relative humidity	10 % to 95 % non-condensing	
Electromagnetic compatibility	EN 61326-1:2013 IEC 61326-1:2013; (Industrial)	
US FCC	CFR 47, Part 15 Subpart B Class A	
Vibration	IEC 60068-2-26 (sinusoidal vibration): 3G, 11–200 Hz, 3 axis.	
Shock	IEC 60068-2-27 (mechanical shock): 50G, 6 ms, 3 axis.	
Size (HxWxL)	8.3 cm x 8.3 cm x 16.5 cm (3.3 in x 3.3 in x 6.5 in)	
Weight	1 kg (2.2 lbs)	
Enclosure rating	IEC 60529: IP67 (protected against dust, limited ingress; protection against water spray from all directions)	
Warranty	Two years (standard), extended warranties are available	
Recommended calibration cycle	Two years (assumes normal operation and normal aging)	
Supported languages	English, French, German, Italian, Russian, Simplified Chinese, Spanish	

Ordering information

FLK-RSE300/C 60Hz Thermal Imager; 320 x 240
FLK-RSE300/C 9Hz Thermal Imager; 320 x 240
FLK-RSE300/C 9Hz/CH Thermal Imager; 320 x 240; 9 Hz, China
FLK-RSE300/C 60Hz Thermal Imager; 640 x 480
FLK-RSE300/C 9Hz Thermal Imager; 640 x 480
FLK-RSE300/C 9Hz/CH Thermal Imager; 640 x 480; 9 Hz, China

What's included

Infrared camera with standard infrared lens; AC power supply; Ethernet cable;
 SmartView software; lens cover; hard case

Optional accessories

FLK 0.75X WIDE LENS Infrared Wide Angle Lens
FLK 2X LENS Infrared Telephoto Lens (2X magnification)
FLK 4X LENS Infrared Telephoto Lens (4X magnification)
FLK MACRO LENS Infrared Macro Lens
FLK-RSE-MB Mounting bracket

Visit your local Fluke website or contact your local Fluke representative for more information.

Fluke. *Keeping your world up and running.®*

Fluke Corporation
 PO Box 9090, Everett, WA 98206 U.S.A.

For more information call:
 In the U.S.A. (800) 443-5853
 In Canada (800) 36-FLUKE
 From other countries +1 (425) 446-5500
www.fluke.com

©2021, 2022 Fluke Corporation.
 Specifications subject to change without notice.
 02/2022 220073-en

Modification of this document is not permitted without written permission from Fluke Corporation.