

## Data sheet

# Electronic Oil Burner Control OBC 85B.10

## Description



The microprocessor based control OBC 85B.10 offers stable and precise timings independent of variations in supply voltage and ambient temperature.

The control is undervoltage protected in accordance with EN 298:2012. In case of

undervoltage the control will prevent the burner from starting and simultaneously show a flash code. Besides this, up to five other fault types can be read out as flash codes when the control is in lockout.

The design complies with the requirements of the RoHS and WEEE directive.

### Application and features

- For 2 stage burners up to 30 kg/h
- For burners with or without preheater
- Precise and reproducible timings
- Limitation at 3 restarts by flame failure within the same operating period
- Limitation of 10 min. on preheating time
- Remote reset and alarm output
- Post-purge
- Indication of reason for lockout
- Indication of preheating and operation

## Function

The OBC 85B.10 controls the cut-in and cut-out of the oil burner's components and monitors that the combustion cycle is performed safely. When the boiler thermostat (TR) cuts in, heating of the oil in the oil preheater (OFV) will begin. Once the release temperature is reached and the oil preheater's thermostat (OTR) cuts in, the burner motor will start the pre-purge and power will simultaneously be applied to the ignition (TT). Following the pre-ignition and pre-purge time, the oil will be released by valve V1 being opened and subsequently V2 will be opened. When the boiler thermostat opens after the heating period power is not cut off when the boiler thermostat opens, as power is still needed for the burner motor so that post-purge can occur. Instead, a timer function ensures that the burner motor continues to run until the end of the postpurge time. If the thermostat cuts in before the end of the post-purge time, the control will interrupt the post-purge and start a new cycle with pre-heating.

**Note: On the OBC 85 the boiler thermostat (TR) must always be connected to terminal 7, and the high temperature cutout (TB) must always be connected to terminal 1.**

### Operating information

OBC 85B.10 is equipped with a two-coloured LED which displays both the operating status and can indicate the causes of errors leading to lockout. In the event of operating lockout, the cause of error can be read out as a flash code by holding down the reset button for at least 5 seconds and

then releasing it. Undervoltage will, however, be displayed automatically. Reset can be performed directly in alarm mode (constant red light) or in flash code mode by pressing the reset button for at least 0.5 seconds but no more than 3 seconds.

In flash code mode it is possible to return to alarm mode by holding down the reset button again for at least 5 seconds.

### Normal operation

When the boiler thermostat (TR) cuts in, the reset button flashes green. As soon as the preheater thermostat (OTR) cuts in, the reset button lights up constant green. When the boiler thermostat cuts out, the green light does not turn off until the post-purge period ends.

### Errors during operation (flash codes):

- If the mains voltage falls below 185 V before start-up, the control will be blocked from starting. If the mains voltage falls below 170 V during operation, the oil supply and burner will be stopped. In both cases, the reset button will automatically flash 8 times. When the mains voltages reaches 185 V, the control will restart as normal. Please note that the control cannot be reset if the mains voltage is below 170 V.

- If the mains voltage exceeds 264 V, the control will automatically enter alarm mode. The purpose of the overvoltage cut out is not simply to protect the electronics in the control, but also the other components in the burner.
- If light is registered in the final stage of the pre-purge time, the control will not release oil and will enter alarm mode.
- If no flame is established at the start, i.e. by the end of the safety time, the control will enter alarm mode.
- In the event of a flame failure during operation, the oil supply will be cut off after no more than 1 second and the control will restart the burner. If flame failure occurs more than three times in the same operating period (TR connected), the control will enter alarm mode.
- If the release temperature in the preheater is not reached within 10 minutes, the control will enter alarm mode.


**Note:**











OBC 85B.10 can only be reset while the supply voltage is connected.

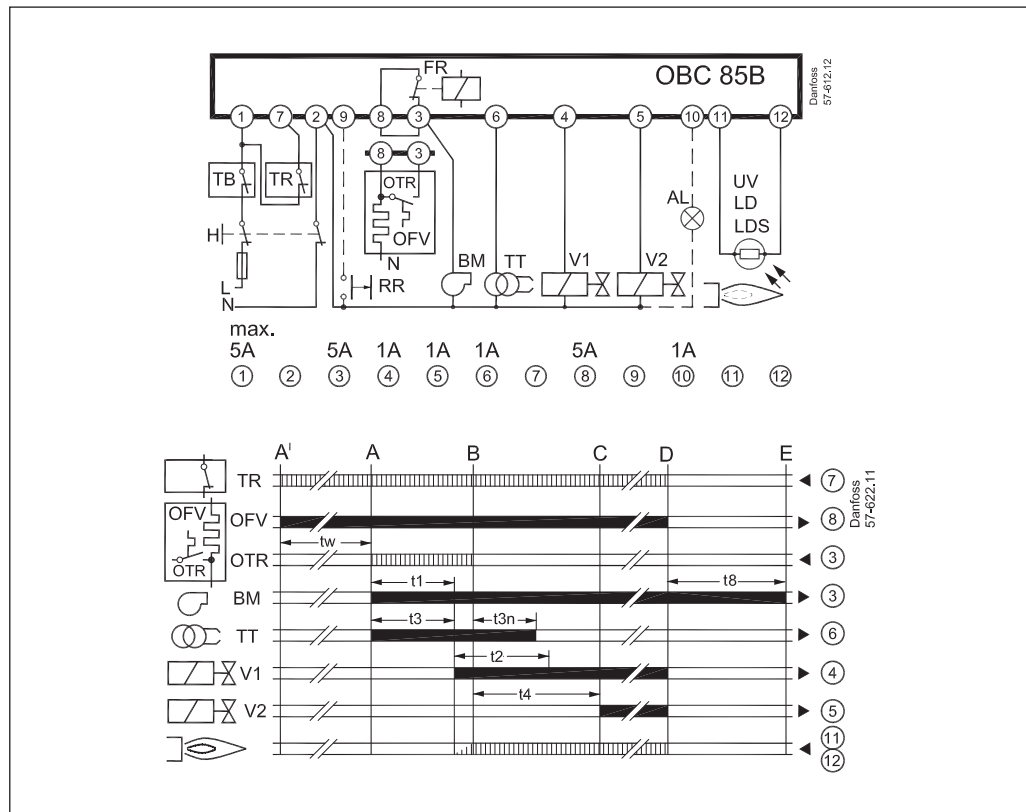

**Flash codes**

| Event   | Code             |
|---|------------------|
| False light                                     | 2 flashes        |
| No flame when safety time elapses               | 3 flashes        |
| More than three restarts in the same cycle      | 4 flashes        |
| Max. waiting time on preheater overrun (10 min) | 5 flashes        |
| Supply voltage above 264 V a.c.                 | 6 flashes        |
| Undervoltage <170 V (automatic)                 | 8 flashes        |
| Application failure (EMC)                       | constant flashes |

The OBC 85B.10 processor also monitors the outputs at TT, V1 and V2. If errors like electrical noise (EMC) are registered at the outputs, the control will enter alarm mode.



| Symbols  |  |
|--|--|
|  TR         | Boiler thermostat                        |
|  TB         | High temperature cutout                  |
|  TT         | Ignition unit                            |
|  BM         | Burner motor                             |
|  V          | Solenoid valve                           |
|  (LD)       | Photo unit or UV sensor                  |
|  AL         | External alarm                           |
| L  | Phase wire                               |
| N  | Neutral wire                             |
|  OFV<br>OTR | Oil preheater / Oil preheater thermostat |
|  FR         | Hold relay                               |
| **  RRR     | Remote reset                             |

| Time function/explanation   |  |
|---|--|
|  | Output signals of control                      |
|  | Required input signals                         |
| A'  | Initiation of burners with oil preheater OFV   |
| A   | Initiation of burners without oil preheater    |
| B   | Flame formation                                |
| C   | Operation position                             |
| D   | Burner stop                                    |
| E   | End post-purge                                 |
| tw  | Heating of oil preheater until OTR switches on |
| t1  | Pre-purge 25 s                                 |
| t2  | Safety time 5 s                                |
| t3*   | Pre-ignition 25 s                              |
| t4  | Interval V1-V2 5 s                             |
| t3n   | Post-ignition 2 s                              |
| t8  | Post-purge 90 s                                |

\* Due to the initialisation of the electronics, it may take up to two seconds before ignition is enabled.

\*\* If the remote reset is activated more than 4 times within 15 minutes it is ignored and cannot be used before the 15 minutes has elapsed unless the power to the control box is turned off or if the reset is done on the control box itself.


**Technical Data**

|   |   |
|---|---|
| Rated voltage                                     | 230 V~  |
| Operating range                                   | 195-253 V~  |
| Frequency   | 50-60 Hz ± 6%   |
| Consumption                                       | 6 VA  |
| Reset   | Immediately   |
| Reaction time on flame failure                    | Max. 1 s  |
| Undervoltage protection                           | < 170 V   |
| Protection class                                  | II  |
| Pollution degree                                  | 2   |
| Main fuse (terminal load, see electrical diagram) | Max. 10 A   |
| Cable connection                                  | Plate for 5 PG 11 screwed connections or plate with knockouts |
| Ambient temperature                               | -20 to +60°C  |
| Installation                                      | Any position  |
| Enclosure   | IP40  |
| Flame monitoring                                  | UV, LD or LDS   |
| Required flame signal                             | No flame / dark ≤ 5 µA<br>Flame / light ≥ 65 µA               |
| Max. cable length between OBC and UV, LD/LDS      | 20 m (installed separately)                                   |

**Ordering**

| Description                        | Weight | Code no.        |
|------------------------------------|--------|-----------------|
| OBC 85B.10                         | 200 g  | <b>057H8710</b> |
| Base BHB                           | 70 g   | <b>057H7010</b> |
| Front plate for BHB, 5 × PG 11     | 12 g   | <b>057H7011</b> |
| Front plate for BHB, 8 × knockouts | 12 g   | <b>057H7012</b> |

Dimensions

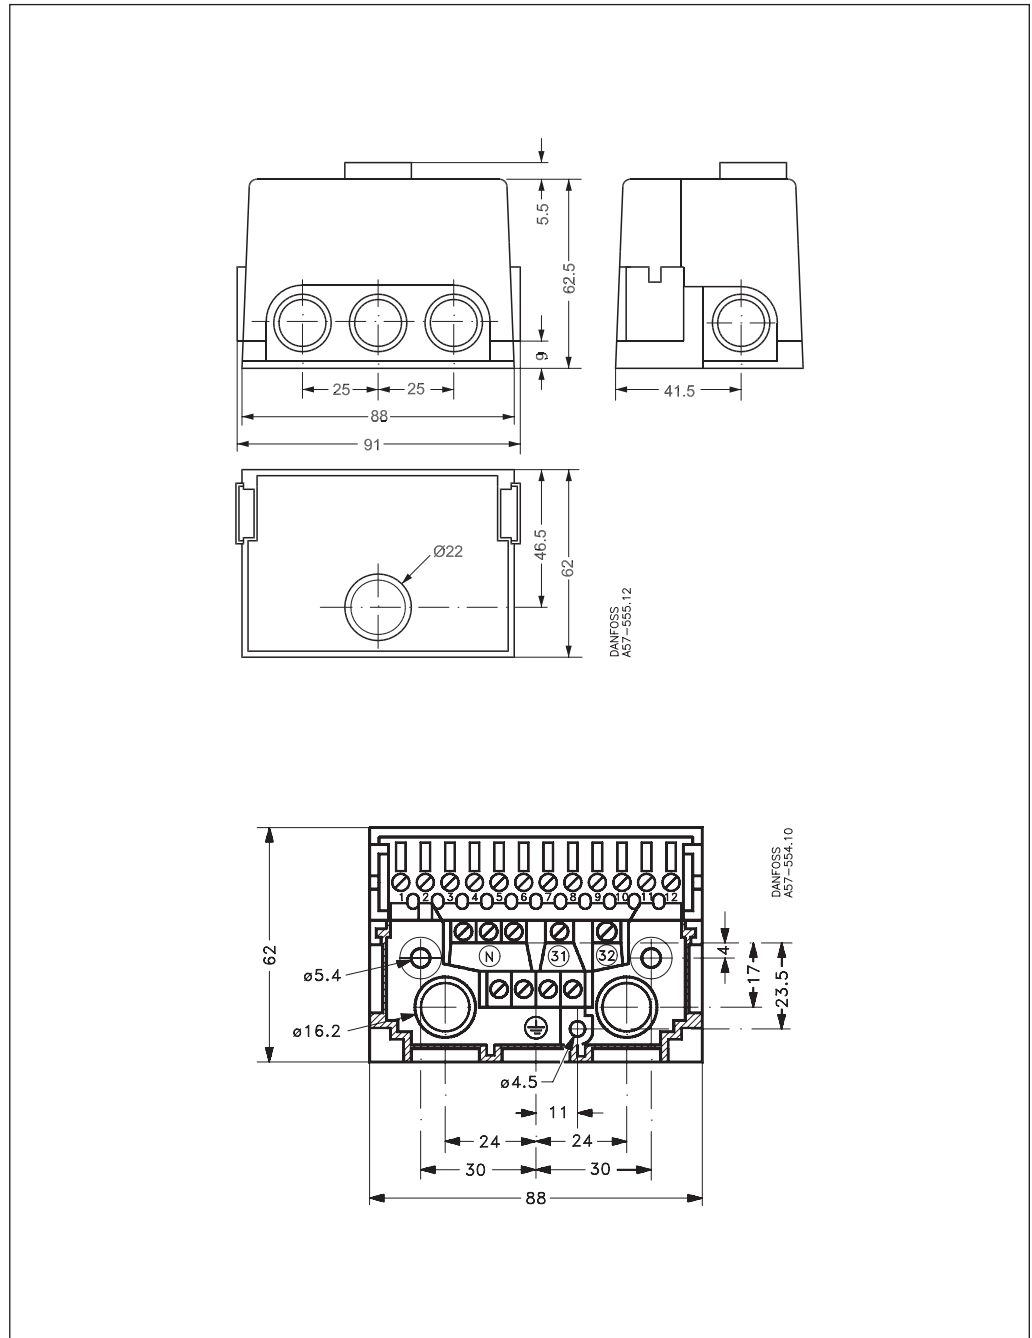

Additional documentation on burner components is available on <http://heating.danfoss.com/> or <https://store.danfoss.com/>